



2820 Wilderness Place, Unit C
Boulder, Colorado, 80301
Tel: (303) 443 6611



Leap Wireless Sensor System

Flood / Water Detection Device User Manual

53-100187-19

Revision 1.2

Contents

- 1. ABOUT THIS MANUAL 4**
- 2. HARDWARE CONFIGURATION – WATER DETECTION 5**
- 3. SOFTWARE INTERFACE 6**
 - 3.1 MAIN DEVICES SOFTWARE SCREEN 6
 - 3.2 SPECIAL SOFTWARE CONFIGURATIONS FOR THE WATER ROPE SENSOR..... 7
 - 3.2.1 *Configuring Normal Operation when the Water Rope is Dry*..... 7
 - 3.2.2 *Setting Thresholds on “Water Leak Detection” and % Saturation*..... 8
 - 3.2.2.1 “Water Leak Detection” Configuration 8
 - 3.2.2.2 % Saturation Configuration 8
 - 3.2.3 *Faster Transmit When Wet Mode*..... 9
 - 3.2.4 *Special Fast Transmit Mode for Testing and Installing* 10
- 4. SPECIAL NOTES ON SETTING TEXT, TELEPHONE, AND EMAIL ALERTS 11**
 - 4.1 CREATING A NEW FLOOD ALERT 11
 - 4.2 EDITING EXISTING ALERTS 12
- 5. TECHNICAL SUPPORT 13**

Copyright and Trademarks

No part of this product or related documentation shall be reproduced in any form by any means without prior written authorization of Phase IV Engineering, Incorporated. No part of this document shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission from Phase IV Engineering, Incorporated.

Although every precaution has been taken in the preparation of this document, Phase IV Engineering assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Phase IV Engineering assumes no responsibility for any loss or claims by third parties that may arise through the use of this product.

Phase IV Engineering assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, repairs, or battery replacement, or power failure.

Phase IV Engineering, Incorporated may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Phase IV Engineering, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

This manual, its related hardware, software and documentation are subject to change without notice and do not represent a commitment on the part of Phase IV Engineering. Phase IV Engineering reserves the right to make changes in the product design without reservation and without notification to its users.

© 2021 by Phase IV Engineering, Incorporated, 2820 Wilderness Place, Unit C, Boulder, Colorado 80301, USA. All rights reserved.

All brands and product names are trademarks or registered trademarks of their respective owners.

1. About this Manual

This User Manual describes specific configuration and usage of the **Leap Flood Sensor Device**.

For general information on the Leap Wireless Sensor system, see the Quick Start Guide and the main user manual – 53-100187-01.

Link to: [Leap Wireless Sensor System User Manual](#)

2. Hardware Configuration – Water Detection

The Leap Flood detection sensor utilizes an orange-colored plastic “rope”. This rope contains 2 wires that are covered with a water-conducting plastic.

When water touches the rope, the resistance between the wire drops and the “Raw ADC Value” reading lowers.

To a limited degree, the water sensor can report “% Saturation” as an increasing amount of water touches the rope. A puddle of water that is a few inches in diameter will typically report as 100% wet.

The water detection rope is very sensitive. For the sensor to report 0% saturated, the rope may need to thoroughly dry.

3. Software Interface

3.1 Main Devices Software Screen

See the screenshot below for information on the unique features in the flood sensor. (Consult the main user manual 54-100187-01 for the foundation software features).


The screenshot shows the 'Water Leak Detection' screen in the LEAP SYSTEM software. The interface includes a navigation bar with 'Devices', 'Alerts', 'Access Control', 'Settings', and 'Admin Tools'. Below the navigation bar, there are options to 'Select All' and 'Deselect All', and a search bar for devices. The main content area displays two device entries, each with a unique ID (086BD7FFFE90890C and 086BD7FFFE9089AF), last communication times, firmware versions, battery levels, and signal strength. Each device entry also shows a 'Device Status' dropdown menu set to 'Active' and a 'Show More Info' button. The 'Water Leak Detection' section for each device shows 'No Leak' and 'Saturation' at 0%. The 'Raw ADC Value' is 1995 for both devices. Three callout boxes provide additional information: 'Reports if a pool of water is touching the rope.', 'Reports wetness level of the water touching the rope.*', and 'This number correlates to the resistance of the water rope. A lower number indicates water present.**'

Special notes on the screenshot above...


- * The water rope is very sensitive. A small puddle of water that is a few inches in diameter (that is touching the rope anywhere) will typically register at 100% saturated.
- ** When the water rope is totally dry, the count is typically nearly 2000. When the rope is very wet, the count is typically below 50.

3.2 Special Software Configurations for the Water Rope Sensor


Click on the main user screen as shown below to enter the configuration screen.

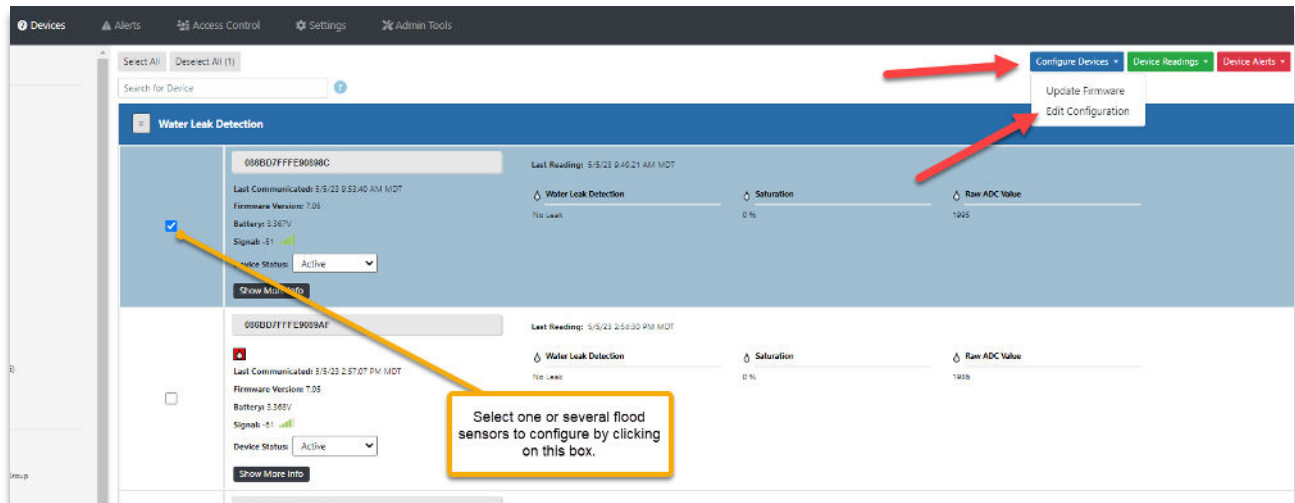

3.2.1 Configuring Normal Operation when the Water Rope is Dry

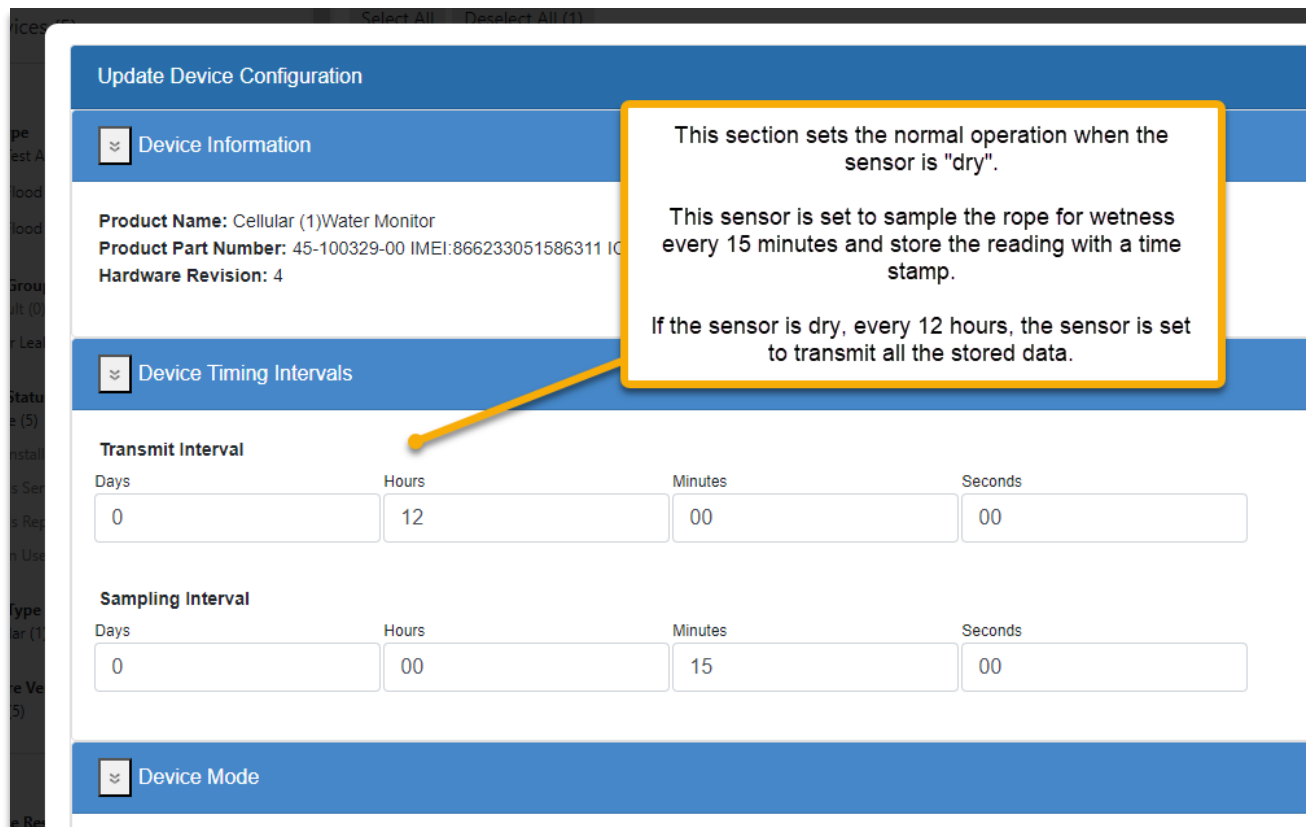

3.2.2 Setting Thresholds on “Water Leak Detection” and % Saturation

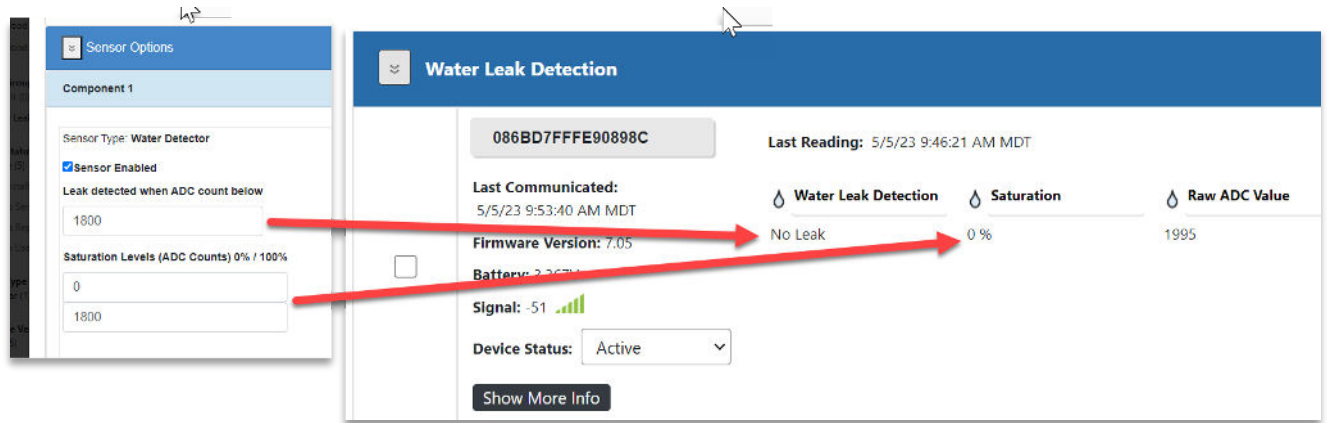

3.2.2.1 “Water Leak Detection” Configuration

In the configuration screen, the “Leak detected when ADC count below” sets the threshold when the “Water Leak Detection” field will switch from “No Leak” to “Leak”.

In the example above, the ADC count is currently at 1995 and the threshold for “Leak” is below 1800 – so the sensor is reporting “No Leak”.

In the example above, if water touched the rope, the ADC count would drop below 1900 and the “Water Leak Detection” would report, “Leak”.

The end-user may want to experiment with putting different amounts of water on the rope and adjusting the “Leak” limit to match the needs of the application.

3.2.2.2 % Saturation Configuration

To have the rope sensor report “% Saturation”, the 100% Raw ADC Count level and the 0% Raw ADC Count level need to be set. Note: the count drops as the rope gets more-wet.

In the example above, the 0% Saturation level (totally dry) is set to 1800 and the 100% Saturation (totally wet) level is set to 0 Raw ADC counts.

Often the end-user may want to experiment with putting different amounts of water on the rope and adjusting these limits to report the % saturation that meets the needs of the application.

3.2.3 Faster Transmit When Wet Mode

The sensor has a special mode that allows the user to change the transmit time interval when the sensor has detected water.

To set-up this special mode, the “Normal Saturation Range” needs to be set. In the example below, this range is from 0% to 5%. This means that if the sensor is reporting 0% saturated to 5% saturated, this is the normal “not wet” range and the special faster-transmit will not be activated.

The screenshot displays the 'System Options' configuration page. It is divided into two main sections:

- System Setting: Sensor Out of Range Interval Configuration**
 - System Enabled
 - Sample interval when sensor out of range**

Days	Hours	Minutes	Seconds
0	00	5	00
 - Transmit interval when sensor out of range**

Days	Hours	Minutes	Seconds
0	00	10	00
- System Setting: Normal saturation range configuration**
 - System Enabled
 - Normal Saturation Range (%)**

0
5

Callouts:

- A yellow callout box points to the 'Sample interval when sensor out of range' section, stating: "This special mode allows the user to set faster sample and transmit times when the sensor is wet. In this example, if the sensor is reporting a saturation level of >5%, then the sensor will increase the sample rate to 5 minutes and will increase the transmit rate to 10 minutes."
- A yellow callout box points to the 'Normal Saturation Range (%)' section, stating: "In this range, the special faster-transmit mode will not be activated."
- A red callout box with an arrow pointing to the 'Transmit interval when sensor out of range' section contains an **IMPORTANT NOTE:** "Sample interval may not be faster than 5 minutes. Transmit interval may not be faster than 10 minutes."

3.2.4 Special Fast Transmit Mode for Testing and Installing

This sensor is intended to be used for long-term monitoring with transmit times between an hour to a day.


But, during testing and during installation, it helps if the sensor can temporarily be put into a special mode where it transmits much faster. This is called, “Installer Mode”

To activate Installer Mode, press the black push-button switch on the enclosure so that it is ‘pushed in’.

To de-activate this mode, press the black button again so that it is flush with the switch bezel.

In the example below, the flood sensor will sample the rope every 60 seconds and transmit every 60 seconds when the black switch is depressed.

IMPORTANT NOTE: Take care to only use the Installer Mode for short time spans to avoid large cellular usage charges.

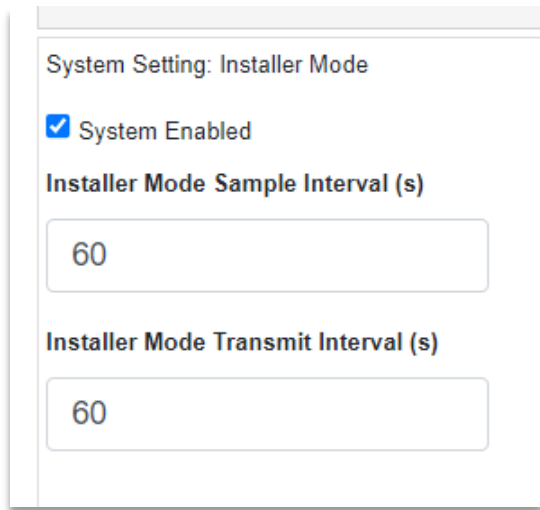


The screenshot shows a configuration window titled "System Setting: Installer Mode". It contains a checked checkbox for "System Enabled". Below this are two input fields: "Installer Mode Sample Interval (s)" with the value "60" and "Installer Mode Transmit Interval (s)" with the value "60".

4. Special Notes on Setting Text, Telephone, and Email Alerts

4.1 Creating a New Flood Alert

Follow the instructions below to set-up text, telephone, and email alerts.

Select the sensors that you want to apply an new alert by clicking the box as shown below.

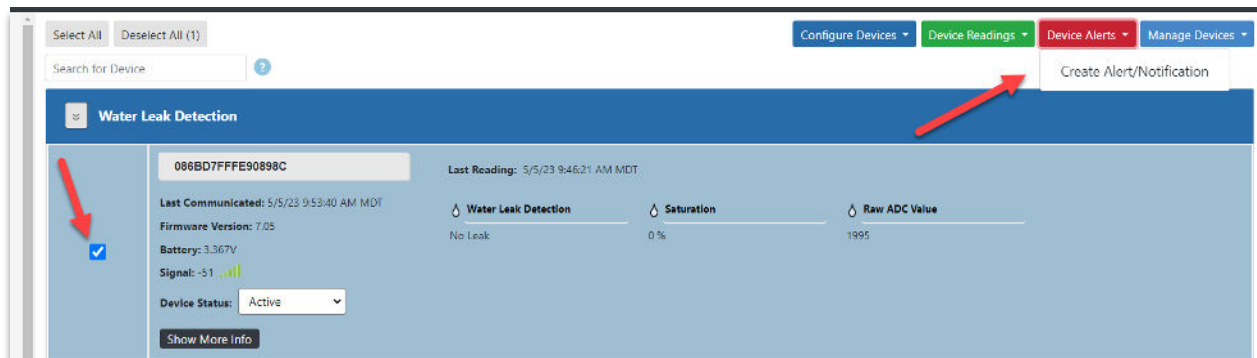

The alert screen...

Alert Criteria

Alert on: Water Leak Detection

Threshold: Equal To (Required)

Additionally Apply to the Following Sensors:

Number of Notifications: 10

User	Click to enable:	Email	Text	Phone
[Redacted]				
[Redacted]				
[Redacted]				
[Redacted]				

Alert Information

Water Leak Detection

086BD7FFFE90898C Last Reading: 5/5/23 9:46:21 AM MDT

Last Communicated: 5/5/23 9:53:40 AM MDT

Firmware Version: 7.05

Battery: 3.367V

Signal: -51

Device Status: Active

Show More Info

Water Leak Detection No Leak

Saturation 0%

Raw ADC Value 1995

The "Water Leak Detection" alert uses this data.

The "Saturation" Alert uses this data.

The "Raw ADC Value" Alert uses this data.

Water Leak Detection Alert: If you want to send an alert when the “Water Leak Detection” is reporting “Leak” set: “Threshold” to “Equal To” and enter: 1 in the next required field.

The other alerts may be set using the normal alert setting process.

NOTE: Inactivity alerts are recommended on all sensors to send an alert when a sensor transmission is over-due.

4.2 Editing Existing Alerts

To edit an existing alert, click on “Alerts” on the black bar at the top of the screen.

5. Technical Support

For more information about our products and services, or for technical assistance:

Visit us at: www.phaseivengr.com
Tel: +(303) 443 6611 (USA – MST 8:00 a.m. to 5:00 p.m., Mon.-Fri.)
E-Mail: support@phaseivengr.com

If you need assistance, please provide the product part number, product serial number, and product version.